

CLOTHING PROTECTOR (ADULT BIB)

FINISHED SIZE

SMALL: 16" X 28 ½" / MEDIUM: 17" X 30 ½" / LARGE: 18" X 32" (APPROX.)

This clothing protector is a specially designed bib for all purposes. A few other ways you can use it is on children too since it is bigger than baby bibs it can cover whole surface and you don't have to worry about the food getting on the child's pants. By attaching snaps on the bottom corner and folding the edge it can actually catch foods and you can avoid the mess of cleaning the floors. Moreover, this can be used as a smock when doing creative projects that makes a lot of mess! *Designer's Review*

MATERIAL LIST

FABRIC

44" wide heavyweight home decorator OR quilting weight cotton
(1) Yard for bib (exterior, interior)

OTHERS

(1) 1" wide 2" length hook and loop fastener
(2) Packs of line 24 snap (Optional)
(1) Spool of coordinating thread

TOOL LIST

Ruler, Scissors, Chalk pencil, Pencil, Sewing machine, Pins, Needle, Shape tool, fabric clips, Installation tool for install line 24 snaps (Optional), Hammer (Optional)

© 2020 Copyright of ithinksew.com

The finished products may only be sold when the following conditions are applied.

*Full credit must be given to ithinksew.com for the patterns (both online and offline). For example, when products are sold online, they must include a statement saying "This pattern was designed by ithinksew.com."

When sold offline, a tag must be attached, stating, "The finished products may only be made by crafters. It may not be mass produced." The conditions above may change.

* All seam allowances are 3/8" unless specified otherwise

*All units are in inches.

** After printing the pattern and taping the pieces together, please follow the reference the provided size guide (3" or 5").

** Patterns marked as A4 are for users who utilize the A4 standard paper size. If the pattern fits inside a single page of letter and/or A4 paper then a separate A4 size file is not included, as the pattern will work with both paper sizes.


Cut out the Fabric

Draw the patterns directly onto the wrong side of a single layer of fabric. Cut out all the pieces.


- (2) Bib Pieces (1 for exterior, 1 for interior)
- (2) 1 ½" Length Hook and Loop Fasteners

Assemble the Bib


1 Place the two bib pieces with right sides together. Pin and stitch the two together, back stitch on both ends. Leaving a opening for turning the bib right side out on the bottom of the bib.

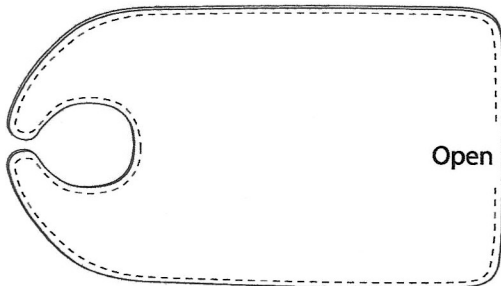

2 Notch and clip the curved seams.

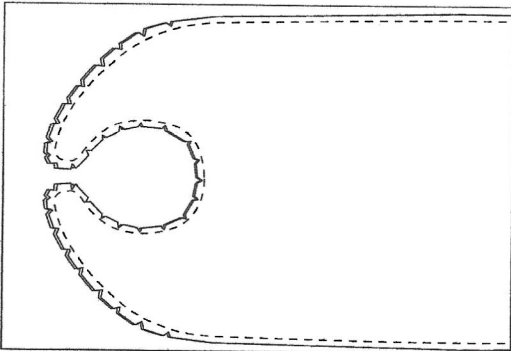

3 Turn the bib right side out through the opening. Press and topstitch 1/4" away from the seam.

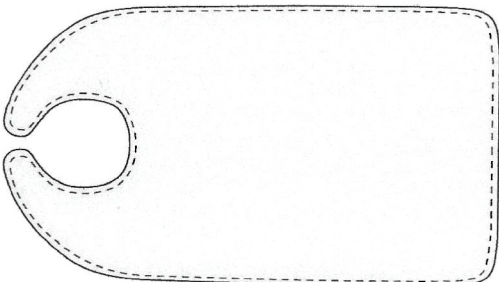

4 Attach the snaps on both ends as indicated on the pattern. See Appendix O. "Attach the snaps"




Attach the hook and loop fastener

1 Separate the hook and loop fastener.

2 Lay the exterior side facing up.

3 Place the hook and loop fasteners onto the exterior side and interior side of the faced place as indicated on the pattern. Use the fabric clip to hold it.

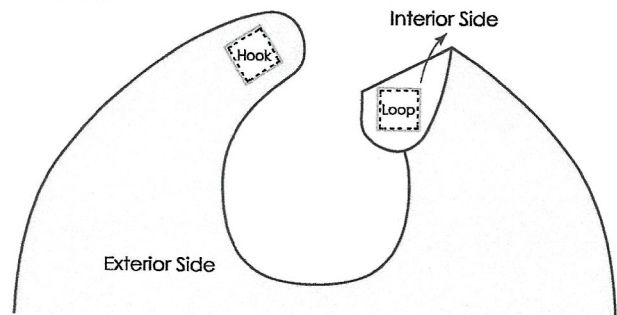

4 Stitch the hook and loop fasteners in a rectangular shape.